
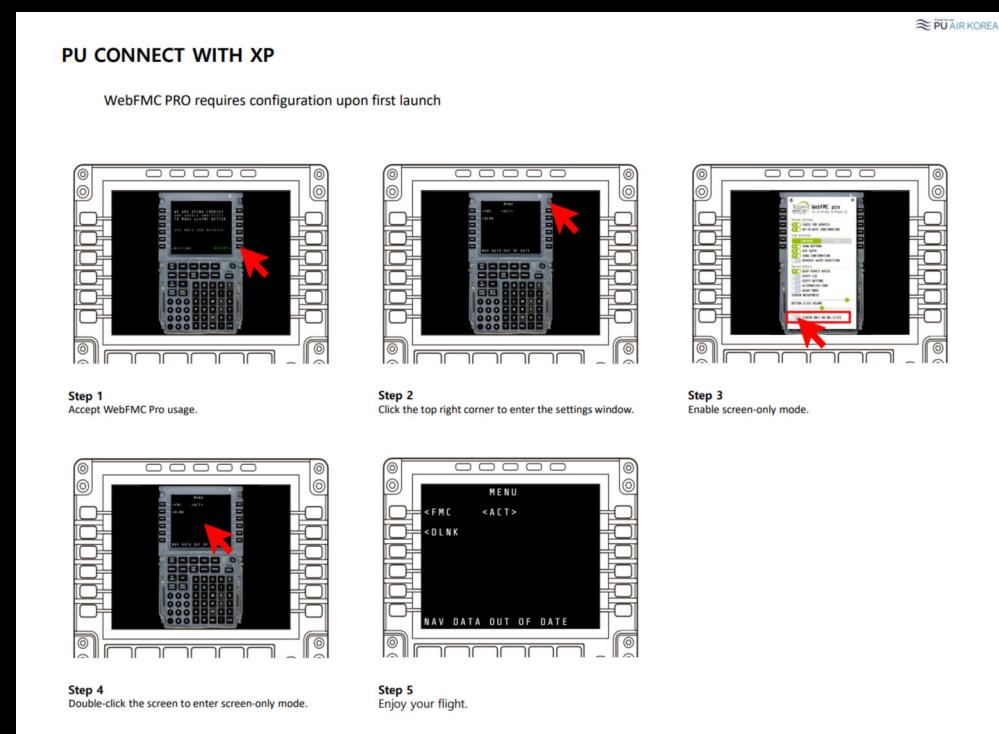


# This is the case when using XPLANE.


5. When you do a screen pop-up through the WEBFMC program, try it like the picture below.

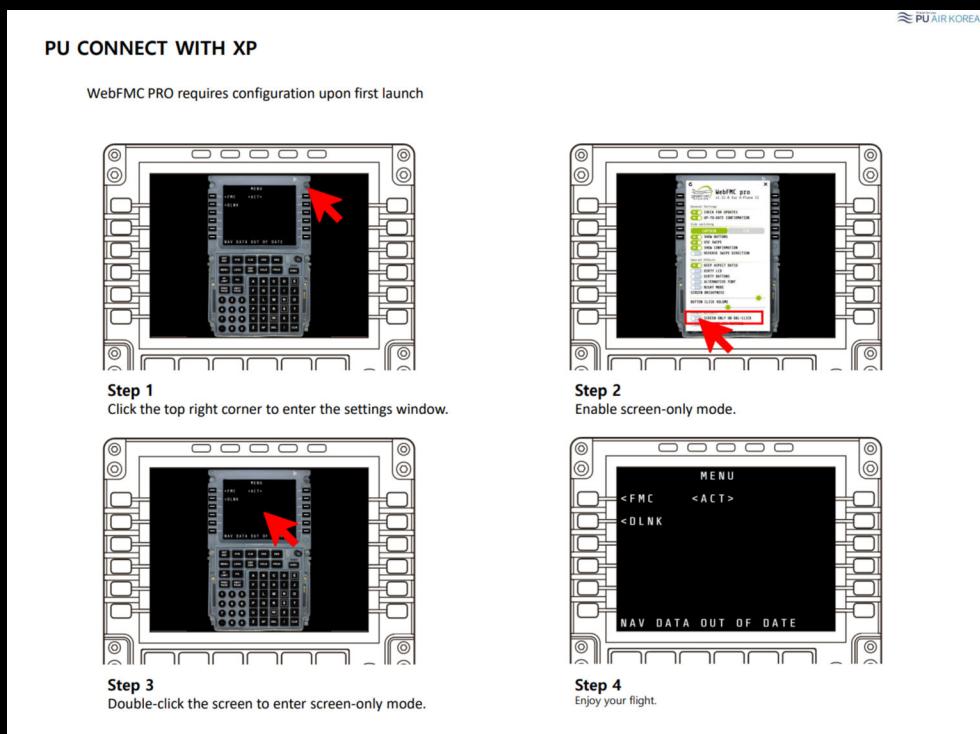

Screen is not working

This is the case when using **XPLANE**

6. If the screen does not appear on the CDU after trying 5 methods, drag the browser to the CDU screen as shown in the picture and press F11 to make it a full screen.  
(If you think CDU is a small monitor, it will be a little easier to understand)

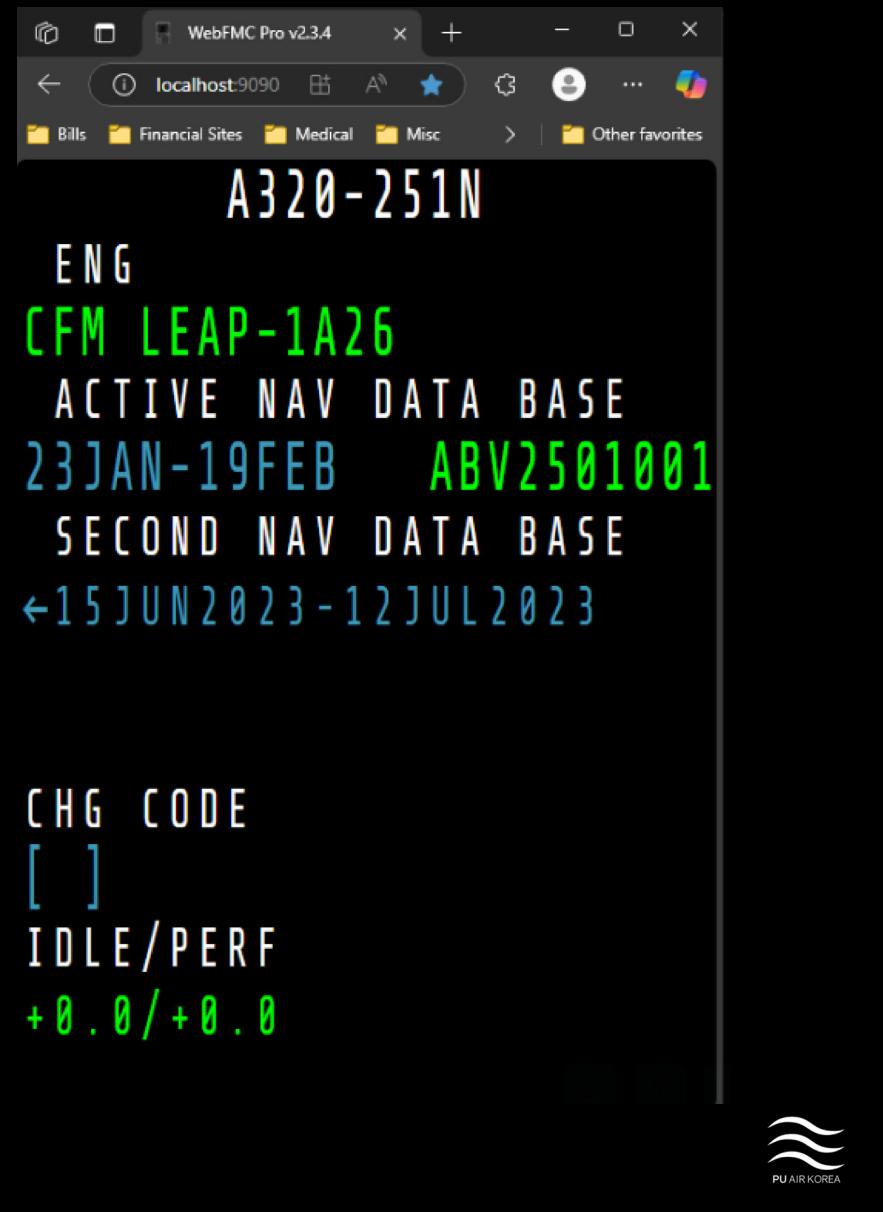

Screen is not working

This is the case when using **XPLANE**

7. Please check the check box as shown in the picture and try SPA.  
After checking in PU CONNECT, the software must be re-executed to be applied.

